Beretta

Model 76
Caliber .22 L.R.

- Parts List
- Instructions
- Maintenance
- Specifications

Armi Beretta S.p.A. - 25063 Gardone Valtrompia, Brescia (Italy)

Mod. 76 Beretta .22 L.R. Caliber

Designed for the serious minded competitor. The target pistol that incorporates all the features necessary in match shooting ... adjustable target sights, heavy barrel, ideal weight, perfect balance, and non-glare rib.

Specifications:

Caliber	22 Long Rifle
Barrel	6 inches
Magazine	10 rounds, push button release
Length Overall	9 inches
Sights	Rear adjustable, 3 inter-changeable front
Safety	Lever
Hammer	External
Finish	Blue
Weight	App. 33 ounces
Stock	Two piece wrap-around, checkered
Slide	Stays open on last shot

OPTIONAL
Wooden grips

1 - Remove the magazine by depressing the release button (Figure 1).

2 - Pull slide back fully and check chamber for loaded round. (Carefully cock hammer first in order to ease backward movement).

3 - Holding the pistol in the right hand, pull slide to the rear and align slide lock with recess in slide. (Figure 2).

4 - With right thumb, rotate the slide lock toward the muzzle.

5 - Pull slide forward and remove from the frame. (Figure 3). (Should it be difficult to rotate slide lock, tap barrel muzzle on a wooden surface two or three times in order to relieve pressure between slide lock and barrel lug. If you should encounter further difficulty, pull slide back as far as possible and release several times in order to ease forward motion).

③

④

6 - In order to remove barrel from the slide assembly, release recoil spring and guide. (Spring and guide are under tension . . . remove carefully). The barrel may now be withdrawn through the underside of the slide (Fig. 4).

7 - No further disassembly is recommended except by a competent gunsmith.

8 - Assemble in reverse order.

TAKE CARE OF YOUR GUN, IT WILL LAST LONGER AND YOU WILL GET THE BEST RESULTS. KEEP IT CLEAN AND LUBRICATED THROUGHOUT. AFTER EACH FIRING, CLEAN BARREL TO AVOID OXIDATION.

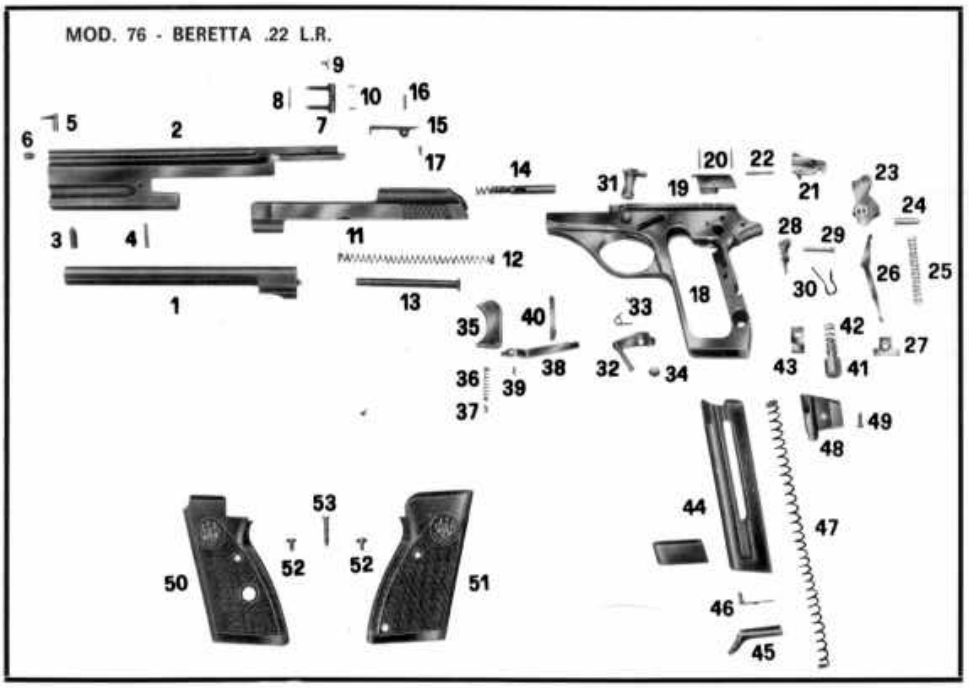

COMPONENT PARTS

MOD. 76 - BERETTA .22 L.R.

1 - Barrel
2 - Weight
3 - Weight screw
4 - Weight pin
5 - Interchangeable front sight
6 - Front sight screw
7 - Rear sight
8 - Rear sight pin
9 - Rear sight screw
10 - Rear sight spring (2)
11 - Slide
12 - Recoil spring
13 - Recoil spring guide
14 - Firing pin with spring
15 - Extractor
16 - Extractor pin
17 - Extractor spring
18 - Steel frame
19 - Ejector
20 - Ejector (2)
21 - Safety
22 - Safety spring with pin
23 - Hammer
24 - Hammer pin
25 - Hammer spring
26 - Hammer strut
27 - Strut nut
28 - Sear
29 - Sear pin
30 - Sear spring
31 - Slide lock with circlip
32 - Slide catch
33 - Slide catch spring
34 - Slide catch screw
35 - Trigger
36 - Trigger bar spring
37 - Trigger bar spring plunger
38 - Trigger bar
39 - Trigger bar pin
40 - Disconnector
41 - Magazine release button
42 - Magazine release button spring
43 - Magazine release catch
44 - Magazine box
45 - Magazine bottom
46 - Magazine bottom plate
47 - Magazine spring
48 - Follower
49 - Follower screw
50 - Left grip
51 - Right grip
52 - Grip screw (2)
53 - Grip securing screw

Printed in Italy - 12/69 - F. Apollonio & C. - Brescia